

6 Room thermostat



After 30 seconds of inactivity the display reverts to the showing the current room temperature.

6.1 Normal operation

Under normal operation the display shows the current room temperature in centigrade.



Fig. 15 Normal screen

1. Current room temperature
2. Battery condition indicator
3. Burner ON indicator

Press the knob briefly to display the required room temperature.

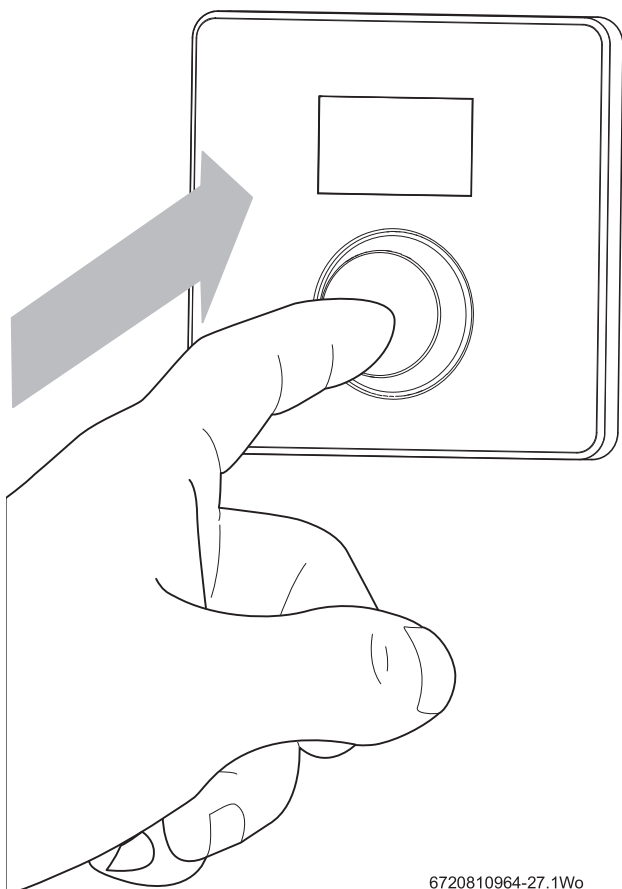


Fig. 16

Turn the knob anti-clockwise to decrease the temperature or clockwise to increase. The new temperature setting will flash for three seconds.

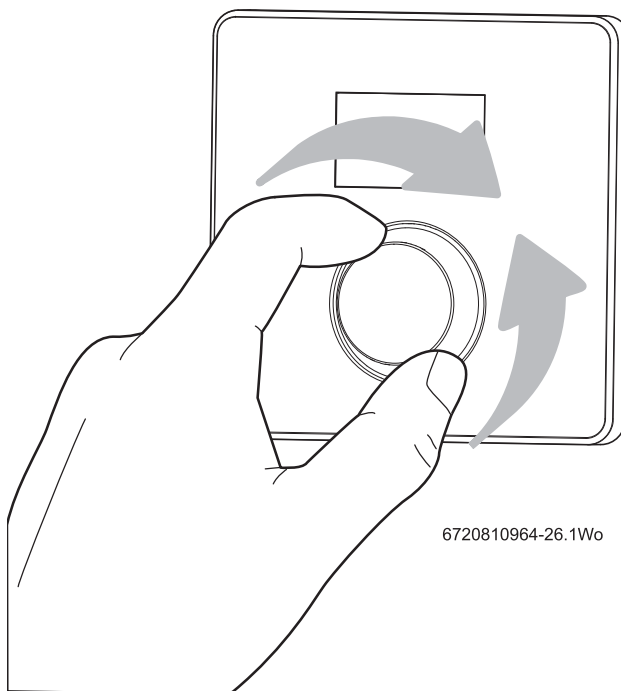


Fig. 17

If the Programmer/Receiver is in an **OFF** period, the Room thermostat will display the new temperature setting flashing for three seconds and then **OFF** flashing for three seconds.

Low battery

The battery symbol indicates the batteries require replacing within two months refer to section 9.1

Burner ON indicator

The symbol is shown when the boiler is firing (there may be up to a six minute delay between the boiler firing and the symbol being displayed).

Low RF signal strength



The **A21** fault code will be displayed at initial switch on until the two units have established an RF communication link

The **A21** fault code indicates no RF signal, refer to section 6.7 for the signal strength indication on the Room Thermostat.