


Front and Rear Hall Smoke Alarms

To test, firmly press the **test** button in the centre and release.


The unit will give an audible Alarm consisting of 2 cycles of 3 loud beeps, then stop automatically.

The red LED on the alarm will flash rapidly during the audible signal.

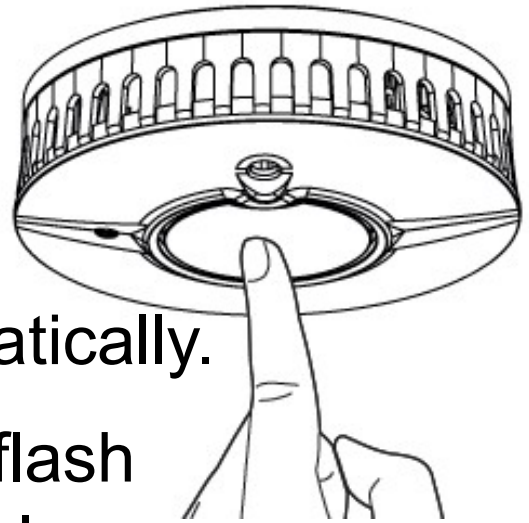

In the event of a known false alarm your smoke alarm can be temporarily silenced by briefly pressing the central test button.

The alarm will automatically return to full sensitivity within 10 minutes.

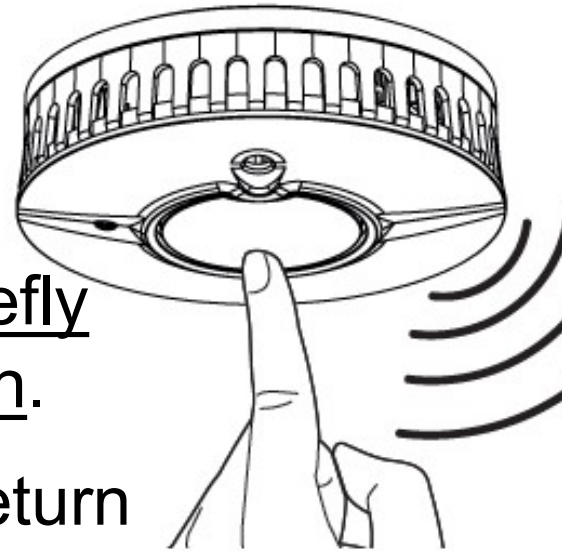

NOTE: If the level of smoke reaching the alarm is very high the alarm silence will be overridden & the alarm will continue to sound.

If the alarm chirps every 40 seconds, this indicates that the battery is low and needs replacing within 7 days – This can be silenced for 8 hours by pressing the Test button.